



AFBT

FLASH VESSEL TANK SYSTEMS

GENERAL FEATURES

Things To Be Careful About Choosing Flash Vessel Tank

Saturated steam, which evaporates from the heat transfer surfaces, is converted into condensate at the same pressure.

The enthalpy of saturated water at 1 bar pressure is 505 kJ / kg. If the condensate at 6 bar pressure is released by 1 bar the energy output will be 697-505 = 192 kJ / kg. This energy evaporates some of the condensate to steam.

This steam is Flash Steam.

Why Flash Steam is Important?

It includes too much energy and it can be mounted to different installation areas.

If Flash Steam drains to the atmosphere there will be waste energy and efficiency lost.

Acquiring Flash Steam

When the water is heated under atmospheric pressure, the temperature rises up to 100 ° C.

The heat to be given does not increase

the temperature, but it converts water to steam.

The heat absorbed by the water during the rising of the temperature to the boiling point is called "sensible heat" or "saturated liquid heat".

At the same temperature, the heat required to turn the water at the boiling point into steam is called "latent heat". The amount of heat required to increase 1 kg of water temperature by 1 ° C in the atmospheric pressure is 4,186 kJ.

The saturated liquid temperature of the condensate at steam temperature and pressure of 8 bar is 721 kJ / kg (saturated steam table).

If this condensate is leaked to a 2 bar tank, the heat value (saturated liquid temperature) drops to 504 kJ / kg.

This is 721-504 = 217 kJ/kg of excess condensate. The percentage of the condensate to be transformed into the steam can be calculated as follows.

$$\% \text{ Flash Steam} = (Q1 - Q2 / q) \times 100$$

Q1: Saturated liquid heat at high pressure before discharge

Q2: Saturated liquid heat of the condensate at low pressure

q: The latent heat of the steam at low pressure where the condensate is drained

$$\% \text{ Flash Steam} = (721 - 504 / 2201) \times 100 = 9.6\%$$

That is, if there is a condensate of 3000 kg;

$$\text{Flash Steam} = 3000 \times 9.6\% = 288 \text{ kg/h.}$$

Flash Steam Tanks are used to separate the flash steam from the condensate water.

In order for the flash steam to move towards the top outlet at the correct speed, the diameter of the steam tank must be appropriate. This speed is about 3-5 m/s and the velocity at which water droplets can reach the bottom of the tank.

In order to be efficient, the condensate inlet to the tank should be one-third of the tank neck below.

FLASH VESSEL TANK SYSTEMS

The diameter of the flash steam tank should be a diameter that allows the passage of the condensate without coming into turbulence.

If the difference between high and low pressure is small.

The amount of steam is less than the amount of condensate. Flash steam outlet pipe selecting the diameter according to the speed will cause the tank to remain small. in which case the tank must be selected to be two diameters larger.

Choosing Flash Vessel

1- Maximum condensation amount is required to obtain maximum flash steam. For this reason, the capacity of steam traps must be selected carefully, taking into consideration the counterpressure.

It should also be noted that in systems where temperature control valves are used, the valve will be closed and the pressure will drop.

2- The amount of use of flash steam systems must be equal to the amount of flash steam.

Steam can be provided by pressure drop from a higher pressure steam line when the flash steam is missing.

If flash steam is excessive, some of the flash steam must be thrown out.


Also, since the flash used in heating will not be needed in summer, a heat recovery system will not be necessary.

Therefore, the amount of flash steam required must be prepared.

3- It is beneficial if the system to be used with flash steam is close to the outlet of the condensate at high pressure.

The transport of low-pressure condensate requires large diameters and will increase investment costs.


In addition, the heat losses that will occur on large pipe diameters will reduce the benefits of flash buckets.

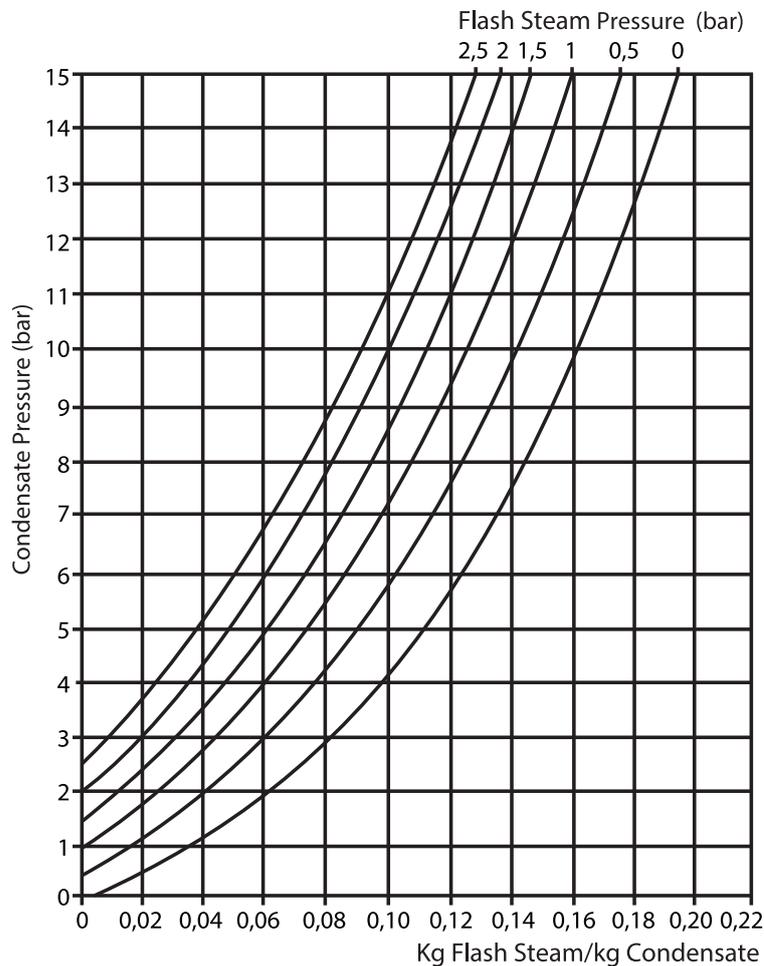

1 Kg Flash Steam/kg Condensate


FLASH VESSEL TANK SYSTEMS

FLASH VESSEL TANK SYSTEMS and ARMATURES

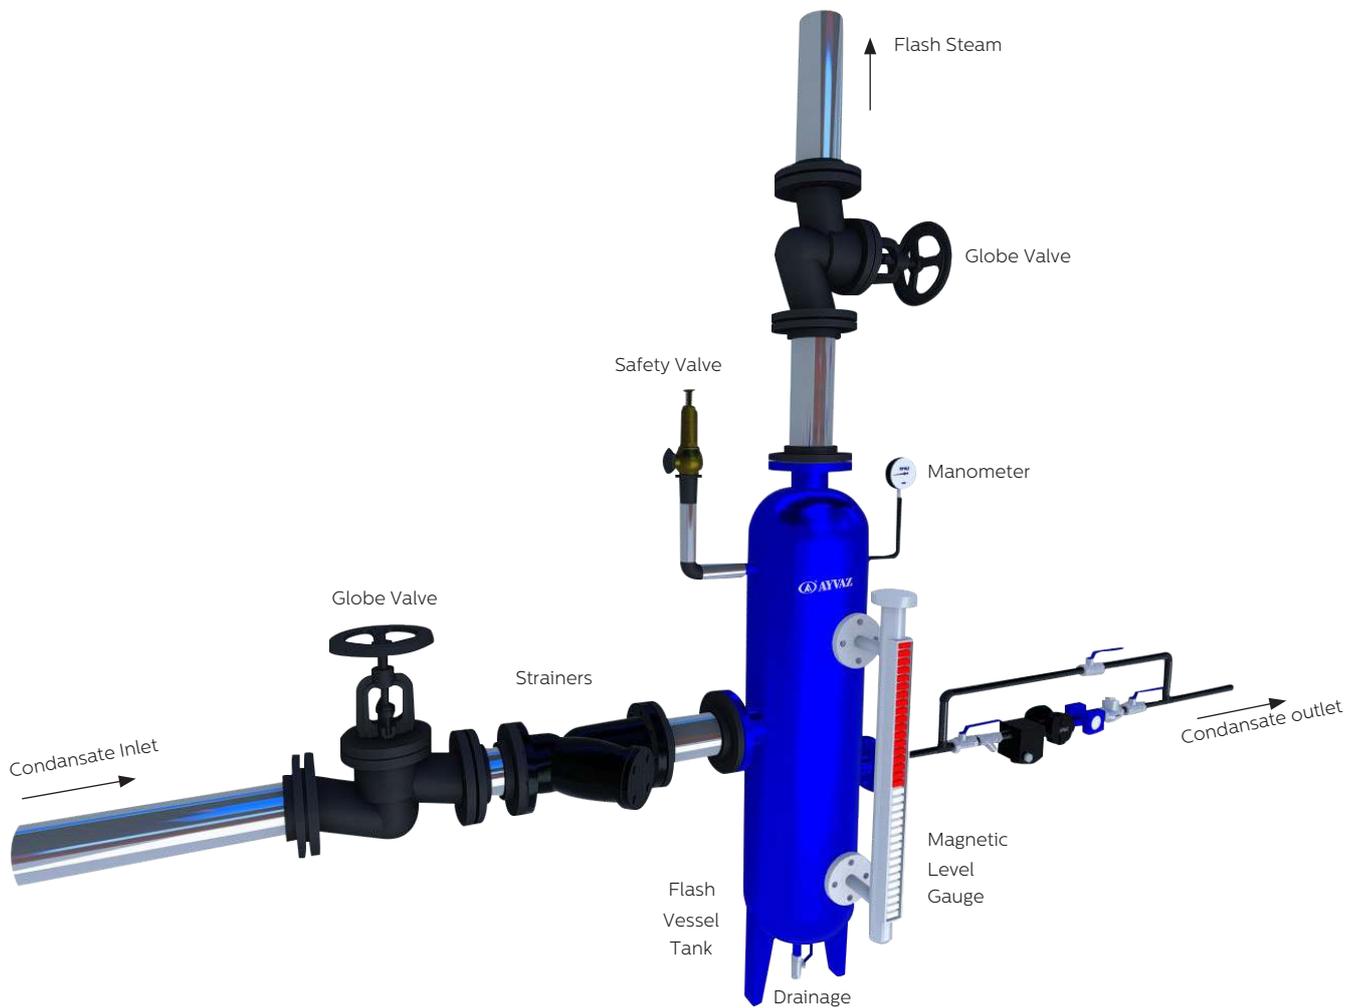

FLASH VESSEL TANK SYSTEMS

FLASH VESSEL TANK DIMENSIONS

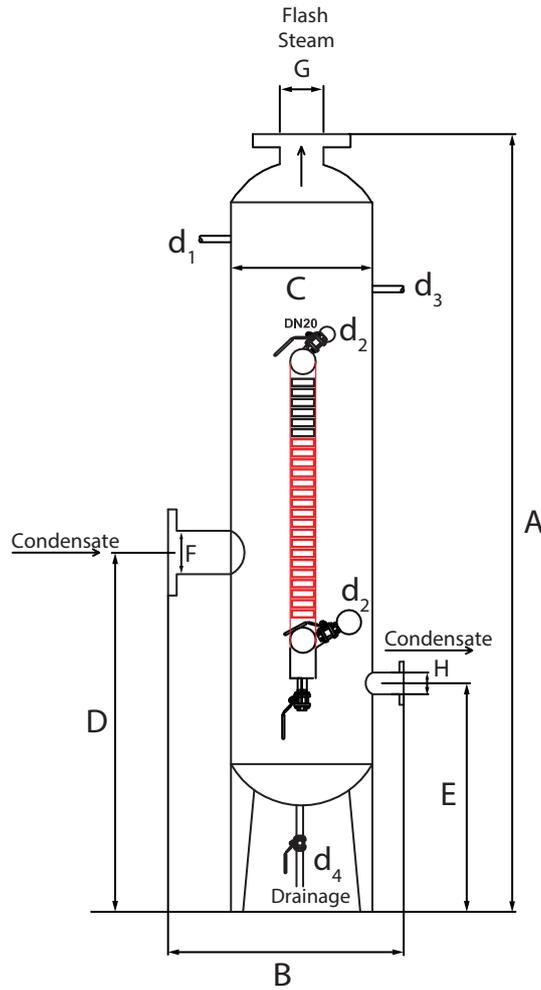

Note: The maximum value of the amount of flash steam generated corresponding to the maximum condensate amount is as follows, which is the result of highest pressure (14-15 bar) move into the atmospheric pressure 0 bar.

Model	Max. Conden. Kg/H	Max. Flash Steam Kg/H	A Height	B (Width)	C Dia.	D	E	F (Condan. Inlet)	G (Flash Steam Outlet)	H (Condan. Outlet)	d1 Safety Valve	d2 Level Gauge Connection	d3 Manometer Connect.	d4 Drain
AFBT1	900	225	1400	300	168	800	630	50	50	50	3/4"	3/4"	1/2"	1"
AFBT2	2250	450	1500	400	219	810	645	80	80	50	1"	3/4"	1/2"	1"
AFBT3	4500	900	1550	500	324	830	650	100	100	50	1 1/2"	3/4"	1/2"	1"
AFBT4	5700	1150	1550	600	355	830	650	125	125	50	1 1/2"	3/4"	1/2"	1"
AFBT5	7800	1800	1650	600	400	930	720	150	150	80	1 1/2"	3/4"	1/2"	1 1/2"
AFBT6	10790	2050	1650	650	450	965	750	150	150	80	2"	3/4"	1/2"	1 1/2"
AFBT7	14600	3200	1650	650	450	965	750	150	150	80	2"	3/4"	1/2"	1 1/2"
AFBT9	18700	5100	1650	650	450	965	750	150	150	80	2"	3/4"	1/2"	1 1/2"



HEAD OFFICE - FACTORY

Atatürk Sanayi Bölgesi Hadımköy Mahallesi Mustafa İnan Caddesi No: 44 Arnavutköy - İSTANBUL
 Tel: +90 212 771 01 45 (pbx) | Fax: +90 212 771 47 27
 info@ayvaz.com | www.ayvaz.com

Cona
Caserta/Italy
 Tel: +39 0823 187 3988
 rmolaro@ayvaz.com

Ayvaz Germany
Viernheim/Germany
 Tel: +49 62046014399
 germany@ayvaz.com

Ayvaz Ukraine
Kiev/Ukraine
 Tel: +380 44 390 57 57
 info@ayvaz.com.ua

Tricorr
Warsaw/Poland
 Tel: +48 530 030 810
 +48 533 603 335
 tricorr@tricorr.eu

Ayvaz Azerbaijan
Baku/Azerbaijan
 Tel: +99 (455) 579-84-32
 ahayatov@ayvaz.com

Ayvaz Egypt
Cairo/Egypt
 Tel: +20 122 819 78 29
 andrew.eid@ayvaz.com

Ayvaz Gulf
Dubai/U.A.E
 Tel: +971 563550822
 +971 501306871
 mideast@ayvaz.com

Ayvaz China
Ningbo/China
 Tel: +86 152 5830 7361
 msahin@ayvaz.com

Ayvaz Kazakhstan LLP
Almaty/Kazakhstan
 Tel: +7 (727) 327 97 57
 info_kz@ayvaz.com

Ayvaz N
Ispereh/Bulgaria
 Tel: +359 8431 27 32
 office@ayvaz-n.eu

Ayvaz Serbia
Belgrade/Serbia
 Tel: +381 61 658 70 52
 yakbiyik@ayvaz.com

Ayvaz Vietnam
HCMC/Vietnam
 ggursoy@ayvaz.com
 Tel: +84 89 8508345

Ayvaz Americas
Rhode Island/USA
 Tel: +1 401 737 8380
 americas@ayvaz.com